

Magneplanar MMC 2 General Instruction Manual

Table of Contents

1. Introduction/General Description
2. Carton Contents
3. Packaging
4. Installation and Placement
5. Phasing
6. Speaker Angle Adjustment
7. Bass Management and Processor Settings
8. Tweeter Level Control
9. Service and Shipping
10. Specifications

You don't like to read manuals? We understand, but, please take the time to carefully read "Placement and Installation" and "Phasing".

1. Introduction / General Description

Congratulations on your purchase of the Magneplanar MMC 2. The MMC 2 is a 3-way, motorized, speaker designed for music or home theater applications. The MMC 2 boasts a "faster" midrange and a quasi-ribbon tweeter and quasi-ribbon super tweeter.

2. Carton Contents

- o 1 - Pair of MMC 2 with Motorized Wall Mounts
- o 1 - Magnepan "Shaped" Pink Noise CD Test Disk
- o 1 - Long 5/64 inch allen wrench
- o 1 - Speaker Logo
- o 1 - MMC 2 General Instruction Manual
- o 1 - MMC 2 Installation Instruction Manual
- o 1 - Each Mounting Template and Kit

3. Packaging

Save all packaging. The MMC 2 can be shipped safely only in the original packaging. Should you discard it, packaging is available from Magnepan.

4. Placement and Installation

Before a permanent installation is begun, we suggest that the Magneplanar Temporary Mounting Kit be used to determine if the selected location gives the desired audio performance for the MMC 2s. A set of mounting brackets are included with the MMC 2 for this purpose. Install the rubber washer on the bottom shaft to keep the speaker in the desired position.

Because the MMC 2 can be used for any channel in a home theater or music system, and because room conditions vary greatly, specific and detailed instructions are not practical. However, there are general guidelines to follow.

Avoid corners. Choose a placement that will position the MMC 2s as far from a corner as possible - preferably more than 3 or 4 feet and the further, the better. We want you to be a satisfied customer and this is a critical issue for good sound. This is especially important for the front channels. Rear channels play a lesser role and more liberties can be taken with the rear channels.

Choose a placement that will allow the bottom of the MMC 2 to be approximately 26 inches from the floor for proper high frequency dispersion when you are sitting or standing.

To help determine the front of the MMC 2, the quasi ribbon foil can be seen through the fabric on the front of the speaker. The speakers should be mounted so that the front of the speakers are on axis with the listener.

The specific instructions for installing the MMC 2 on the wall are in the MMC 2 Installation Instructions.

5. Phasing

Correct phasing between a "small" speaker, like the MMC 2, and the woofer is much more difficult to detect than an out-of-phase condition between left and right speakers. The ear/brain is less sensitive to phase shift problems at lower frequencies and therefore, making it more difficult to detect. However, an out-of-phase condition between the MMC 2s and the woofer will result in a perceived frequency imbalance. A "suckout" in the midbass due to an out-of-phase condition will subjectively make the MMC 2s seem "bright" with excessive high frequencies.

The manufacturer of a full-range speaker gives considerable attention to achieving correct phasing between the midrange and bass drivers. To get the full benefit of your high performance MMC 2s, we suggest that you get the help of your dealer or a technician to ensure that the phasing between the MMC 2s and your woofer is correct.

A Magneplanar "Shaped" Pink Noise CD Test Disk is included with your MMC 2s to assist in the proper phasing between the MMC 2s and your woofer. The pink noise CD is "shaped" with a 9 db peak at 80-100 Hz. This aids in the detection of an out-of-phase condition. This peak in the midbass focuses the attention of the listener on this area of the frequency response. When the MMC 2s are out of phase with the woofer, this peak will be reduced in level. Place the Magneplanar Woofer (or subwoofer) next to the MMC 2s (It is much easier to detect an out-of-phase condition when the "small" speaker is physically next to the Woofer.)



A technique which can aid in determining if the phase is correct is by leaning over and positioning your head equidistance between the Magneplanar Woofer and the "small" Magneplanar as shown in Fig. ___ below. The left and right ears are equidistance to the respective speakers. High frequencies will appear to be up and low frequencies will appear to be down. The 90-100 Hz peak, if in phase, will appear to be in the middle (and louder). Since the Magneplanar Woofer is a dipole, the rear wave is out of phase with the front wave. To reverse the phase for a phase test, simply turn the Magneplanar woofer around.

However, depending on where the woofer is placed, it is possible for the MMC 2s and the woofer to be 90 degrees out of phase with the woofer. This will result in little or no difference in loudness of the peak as the phase is changed. Usually, this means that the woofer is not placed at the correct distance relative to the MMC 2s. Many powered woofers have continuous phase shift adjustments to correct this problem without moving the woofer, although changing the location of the woofer is the preferred solution.

6. Speaker Angle Adjustment

For the best sound, the MMC 2 should be angled so that the panel is on-axis with the listener with a minimum distance from the wall of 30 degrees. (Use of the MMC 2 as a dual center channel speaker requires slightly different adjustments. Contact Magnepan for dual center speaker installations). Pull the MMC 2 out until you feel the resistance of the Cam/Stop. Insert the long 5/64 inch allen wrench into the Cam/Stop at the bottom of the speaker as shown in Fig. 1 and 2 below and loosen the allen screw. Rotate the MMC 2 to the desired position as shown in Fig. 3 and 4 and tighten the allen screw.

The angle of the MMC 2 should never be set for less than 30 degrees for optimum sound.

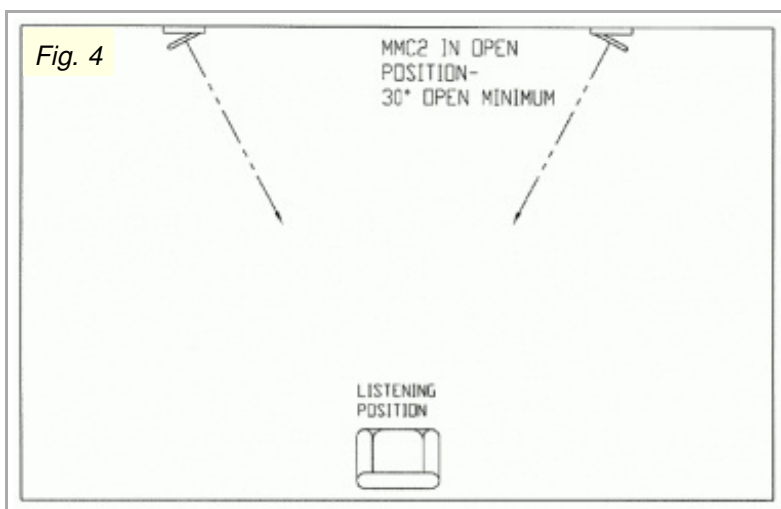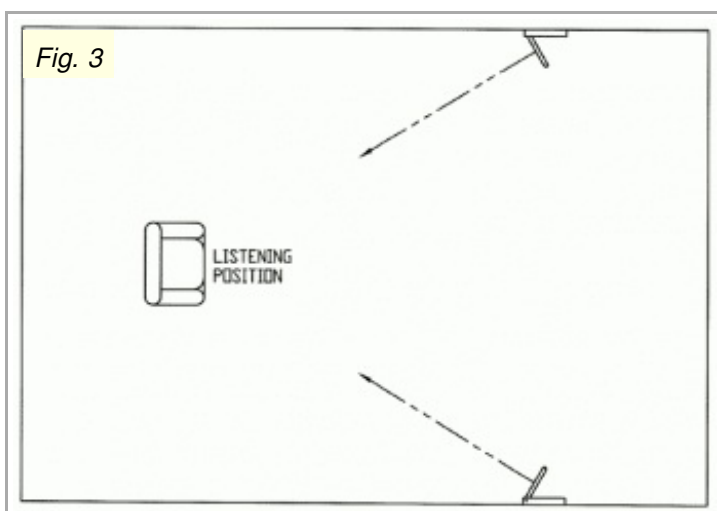

The MMC 2 can be pushed past the stop position without causing harm to the speaker or motor system. The MMC 2 will usually automatically reset back to normal operation after cycling the motor once or twice or if the speaker is pushed beyond the stop position, the panel can be manually pushed back into position.

A nylon screw is included with the MMC 2 to act as a stop so that the MMC 2 can be adjusted to be parallel with the wall in the closed position. The screw hole is located at the bottom inside edge of the MMC 2. To ensure that the nylon screw will not loosen, wrap Teflon plumber's tape on the threads or a drop of blue Loctite or score the threads lengthwise.

7. Bass Management and Processor Settings

The MMC 2 is a "small" speaker with limited midbass response. A high-pass filter is required for the operation of the MMC 2s to roll off the bass frequencies to the MMC 2s. The Magneplanar XO 2 passive crossover can be used with the MMC 2s or if a processor is being used, the processor can be set for "small" speaker.

The lower frequency response of the MMC 2 depends, to a large degree, on the room acoustics and where the MMC 2s are used in the room. For example, a front wall placement of the MMC 2s will result in less midbass and therefore require a higher crossover point. A side wall placement of the MMC 2s in a shoe-boxed shaped room (when placed about 4 feet or more from the front wall) will give the deepest midbass response. Crossover points may vary from 100 Hz to as high as 160-200 Hz, depending on all the variables.

8. Tweeter Level Control

A rocker switch is located on the back of the speaker near the top (in the crossover region). Depressing the switch to the right will give maximum high frequencies. Depressing the switch to the left will reduce the high frequencies with a 1 ohm resistor.

9. Service and Shipping

In the unlikely event you should need service for your MMC 2s, we recommend you return it through your dealer. He is experienced in providing service and can assist you if the speaker must be returned to the factory. If you determine you need to return it directly to Magnepan, call for a return authorization and ship the speaker freight prepaid to:

Magnepan, Incorporated

1645 Ninth St.

White Bear Lake, MN 55110

800-474-1646

Include a note describing the nature of the problem. ***Please include your name, address, and a daytime telephone number.***

10. Specifications

System Description: _____

Frequency Response: _____

Recommended Power: Read our website's FAQ

Sensitivity: 84 dB @2.83V/1 Meter/500Hz

Impedance: 4 Ohms

Crossover Frequency: _____

Dimensions: _____

Warranty: Limited. 3 years to original owner

Shipping Weight: _____